


EZ Access® Crawl Space Door

Installation Instruction

1. Using key unlock door & remove door from frame.
2. Install 5/8 J-molding around 3 sides of frame (top & 2 sides) using small self tapping tek screws (not supplied). Note: J-molding on sides should not extend below raised flat portion of frame – Fig. A.
3. With J-molding installed, frame will now be the width of 2 skirting panels.

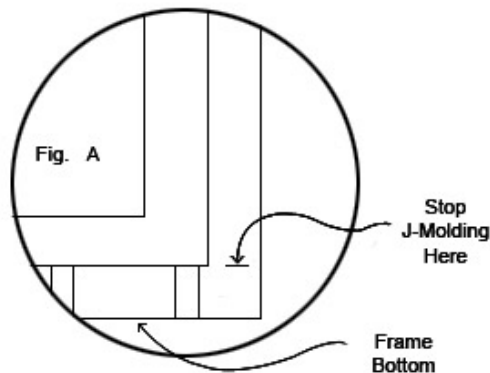

4. Insert bottom of frame into ground track & install skirting in J-molding.
5. Replace door into frame.

Note: For use with existing skirting:

- A. Disengage cap lock at top of skirting & remove two skirting panels by slideing upwards & out.
- B. Replace skirting panels with frame, engaging existing skirting into J-molding & bottom of frame into ground track.
- C. Use skirting removed in step **5A** to fill void between top of frame & cap lock.

(Usually the lengths required can be cut from one skirting panel leaving the other for future use.)

- D. Replace door into frame.

Although the plastic contains some UV protection, the level of protection may be increased by painting. Either latex or oil based paints (most brands of spray cans) are acceptable with oil base paints being more durable.